

	580	600	700	800	900
--	-----	-----	-----	-----	-----

TS Type-B EN CINC

Connecting the Telephone Line

Solution

- [Basic Connection](#)
- [Connecting Various Lines](#)

The connection method differs depending on your telephone line.

- If you connect the machine to wall telephone line directly/If you connect the machine with the xDSL splitter:

-> See [Basic Connection] in this page.

- If you connect the machine to another line such as an xDSL:

-> See [Connecting Various Lines] in this page.

 
If the connection is incorrect, the machine cannot send/receive faxes. Connect the machine correctly.

IMPORTANT

Do not connect fax machines and/or telephones in parallel (US and Canada only).

If two or more fax machines and/or telephones are connected in parallel, the following problems may occur and the machine may not operate properly.


- If you pick up the handset of the telephone that is connected in parallel during fax transmission or reception, the fax image may be corrupted or a communication error may occur.
- Such services as Caller ID, etc. may not operate properly on the telephone.

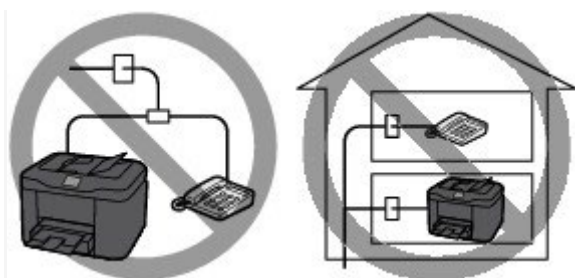


If you cannot avoid parallel connections, set the receive mode to TEL priority mode, understanding that the above problems may occur. You will only be able to receive faxes manually.

Basic Connection

 Make sure that the machine is turned off, connect one end of supplied telephone line cable to the telephone line jack near the "LINE" mark of the machine, then connect the other end to the telephone line jack on the wall or to the telephone line jack of the xDSL splitter.

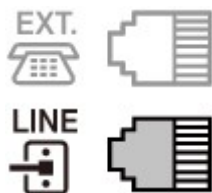

 When you connect the telephone to the machine, make sure that the machine is turned off, connect one end of the modular cable to the external device jack near the "EXT." mark of the machine, then connect the other end to the telephone line jack of the telephone.

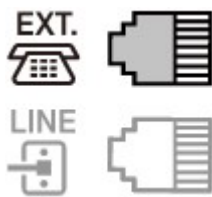

IMPORTANT

- Be sure to connect the telephone line before the machine is turned on.

If you connect the telephone line when the machine is turned on, turn the machine off and unplug the power cord. Wait for 1 minute then connect the telephone line and power plug.

REFERENCE

- Before connecting a telephone or answering machine, remove the Telephone connector cap.
- For users in the UK:

If the connector of the external device cannot be connected to the jack on the machine, you will need to purchase a B.T. adapter to connect as follows:

Attach the B.T. adapter to the modular cable connecting the external device, then connect the B.T. adapter to the external device jack.

Connecting Various Lines

This section introduces how to connect various lines.

These are examples and could not be guaranteed to suit every connecting condition. For

details, refer to the instruction manual supplied with the network device (control devices

 
such as an xDSL (Digital Subscriber Line) modem or terminal adapter) you are connecting to

this machine.

REFERENCE

- xDSL is the generic term for the high speed digital communication technology with telephone line such as ADSL/HDSL/SDSL/VDSL.

- Connecting to an Internet Telephone

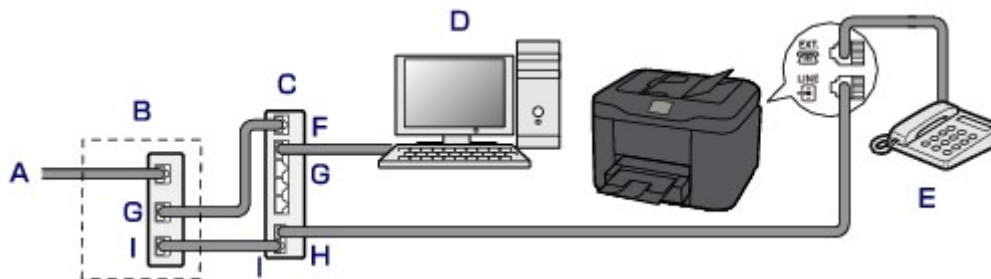

A.Digital Subscriber Line

B.xDSL modem (splitter may not be built-in to the modem)

C.Broadband router compatible with Internet Telephone

D.Computer

E.Telephone or answering machine

F.WAN (Wide Area Network) port

G.LAN (Local Area Network) port

H.TEL port

 
I.LINE port

* Port configurations and names may vary depending on the product.

REFERENCE

- When connecting to the xDSL line, select the same line type as you are subscribing to in Telephone line type.

- Connecting to an xDSL

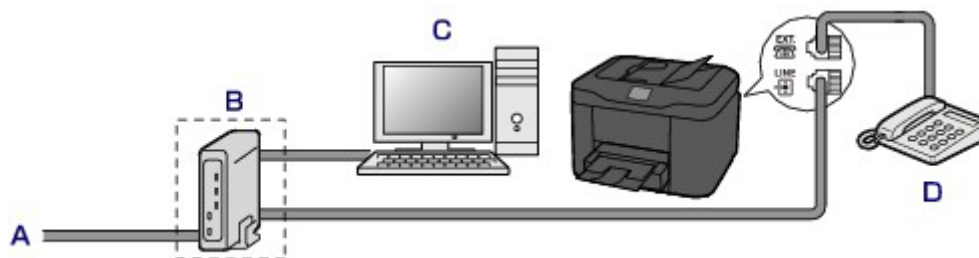

A. Analog Subscriber Line

B. xDSL modem (splitter may not be built-in to the modem)

C. Computer

D. Telephone or answering machine

IMPORTANT

- When the splitter is not built-in to the modem, do not branch the telephone line before the splitter (wall side). And also, do not connect splitters in parallel. The machine may not be able to operate properly.

REFERENCE

- When connecting to the xDSL line, select the same line type as you are subscribing to in Telephone line type.

- Connecting to an ISDN Line

For details on ISDN (Integrated Service Digital Network) connection and settings, refer to the manuals supplied with your terminal adapter or dial-up router.

Related information

Target products

SJSERIES

•MB2330 •MB5330 •MB2030 •MB5030

	580	600	700	800	900
--	-----	-----	-----	-----	-----